



PCI Modem 56K V92

User's Manual

Model # AM-56KI-LU

Table of Contents

Introduction

Features	3
Minimum System Requirements	3
Package Checklist	3

Installation

Hardware Installation	4
Line Connection	4

Installation Procedure

For Windows 98SE / ME / XP/ 2000 / VISTA.....	4
---	---

Modem Dialing Location

For WIN 2000/XP	5
For WIN ME/98SE	5
For WIN VISTA	5

Introduction

Features

This modem card supports following communication standards.

Data

- ITU-T V.92
- ITU-T V.90, V.34, V.32bis, V.32, V.22bis, V.21, V.22
- Bell 103 & 212A
- ITU-T V.44, V.42bis & MNP 5 (Data compression)
- ITU-TV.42 & MNP2-4 (Error correction)

Fax

- ITU-T V.17 (14400bps)
- ITU-T V.29 (9600bps)
- ITU-T V.27 (4800bps)

Minimum System Requirements

- CPU Pentium MMX 233 up
- Windows platform
- Sound Card

Package Checklist

- One Fax Modem/ One Phone cable
- One Driver CD(Quick Installation Guide included)

Hardware Installation

1. Power off your PC and remove the casing of PC carefully.
2. Press the modem card firmly into the free PCI slot and secure it with screws to your PC.
3. Reinstall the casing of PC.
4. Plug the telephone line into the “Line” jack.

Line Connection

Figure I: shows the back panel of the internal modem card.

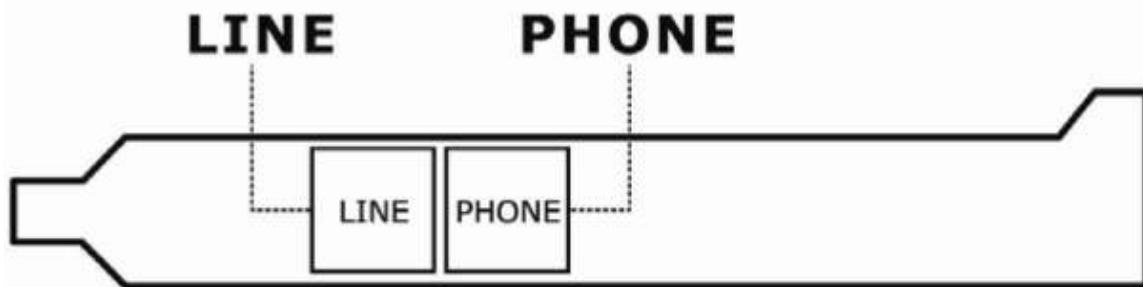


Figure I: Bracket Panel

Software Installation

For Windows 98SE / ME /XP /2000 /VISTA

1. Once you have completed the hardware installation, power on your computer and put the driver CD into the proper CD-ROM. The wizard will search for new hardware. Click **Cancel**.
2. Change the directory where to the CD-Rom drivers (e.g.**D(CD-ROM):\Driver\Win2KXP\VISTA(or other OS version)**) and double-click setup.exe and follow the instruction to complete the driver installation.

Modem Dialing Location

If you want to change your dialing location, please follow the instruction as below:

For WIN 98SE/ME/

Click **Control Panel**

-> **Modems**

-> Under **General** click **Dialing Properties**, and then you can change your location.

For WIN 2000/XP

Click **Control Panel**

-> **Phone And Modem Options**

-> Under **Dialing Rules** click **Edit**, and then you can change your location.

FOR WIN VISTA

Click **Control Panel**

-> **Phone And Modem Options**

-> Under **Dialing Rules** click **Edit**, and then you can change your location.